


USER MANUAL

TEMPORIS 55-EX


ALCATEL

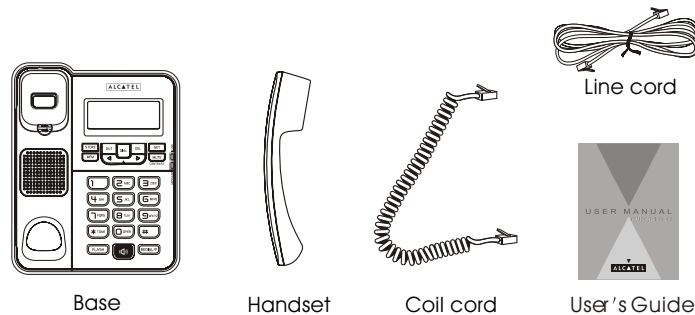

NOTE: If you find any of the parts missing, please contact your local shop where you buy this product right away.

TELEPHONE JACK REQUIREMENTS

To use this phone, you need a RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a jack, call your local phone company to find out how to get one installed.

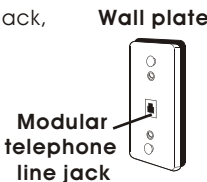

INSTALLATION

CAUTION: Disconnect the phone cord from the wall outlet before installing or replacing the batteries.

- Never install telephone wiring during lightning storm.
- Never touch un-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Never install telephone jack in wet location unless the jack is specifically designed for wet locations.
- Temporarily disconnect any equipment connected to the phone, such as faxes, other phones or modems.

INSTALLING AND REPLACING THE BATTERIES

Your Caller ID phone uses 3 AA-Size alkaline batteries for receiving and storing Caller ID records and for storing the numbers you use for frequently.

IMPORTANT: If you are not going to use the telephone for more than 30 days, remove the batteries because they may leak and damage the unit.

BATTERY

- If the telephone line cord is connected, disconnect it from the base unit.
- Carefully turn over the phone, use a pen or paper clip to loosen the battery cover. Open the battery compartment by pushing on the battery cover and sliding it away from the unit.
- Insert 3 AA-size alkaline batteries (not included) as shown on the diagram in the battery compartment.
- Snap the battery compartment door back into place.
- If the line cord was previously connected, reattach it to the unit and check your memory locations.


INSTALLING THE PHONE

Your phone should be placed on a level surface, such as a desk or table top, or you can mount it on a wall.


- Connecting the handset.
- Connecting the telephone line.

WALL MOUNTING



- Rotate the wall mounting knob as shown in the following layout:

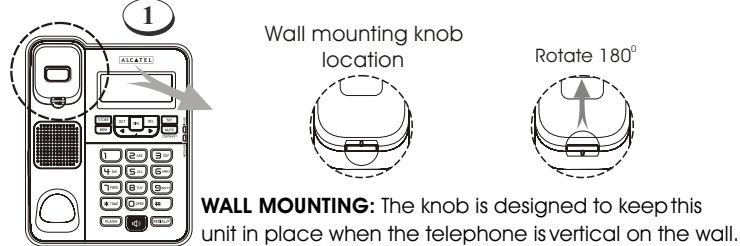

- Install the base unit to the wall and then plug one end of line cord into the junction box and the other end into modular telephone line jack marked "LINE".
- Fix the telephone in the wall as the following layout.

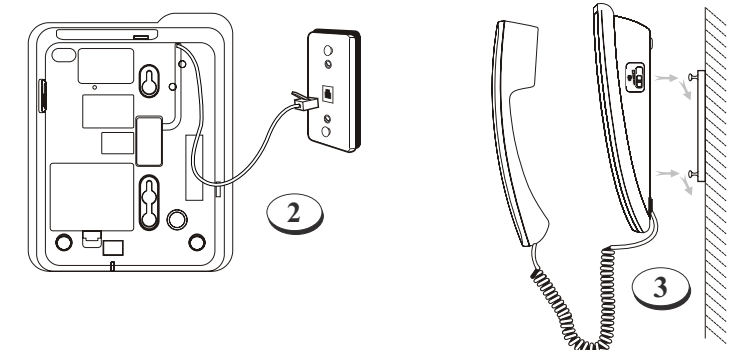

OPTIONS MENU

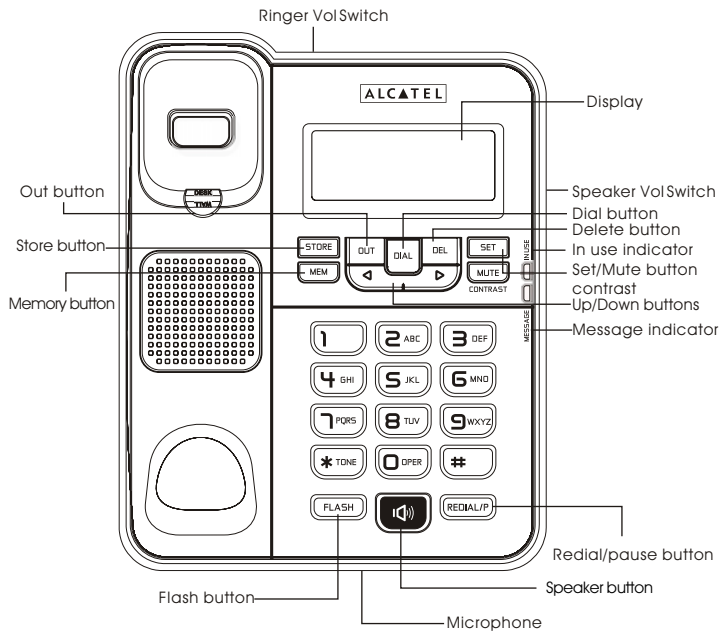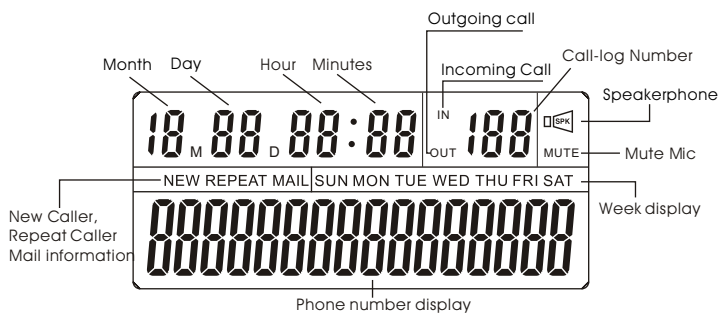

SETTING THE PHONE

NOTE: Proceed immediately to change any of the following factory preset as required.

There are 4 options to set:


SEE 1 DATE Date and Time Setting.

SEE 2 PCODE Pcode is a prefix code that user may add to the front of the number before dialing.


SEE 3 T-P Select the dialing mode. This is dependent of the telephone company you are connected to.

SEE 4 FLASH Timing setting. This timing is to allow user to momentarily access telephone services such as call waiting when **FLASH** button is pressed.


SETTING DATE/TIME

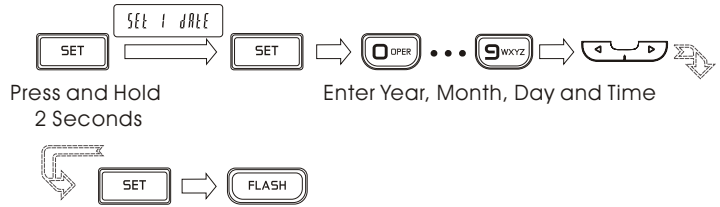


SETTING PCODE

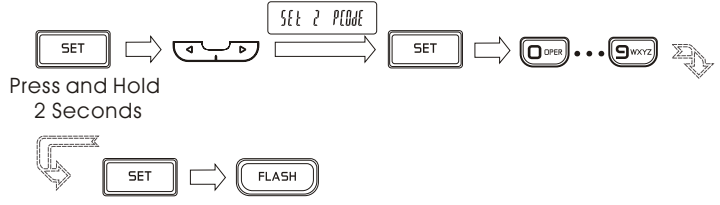

SETTING TONE/PULSE

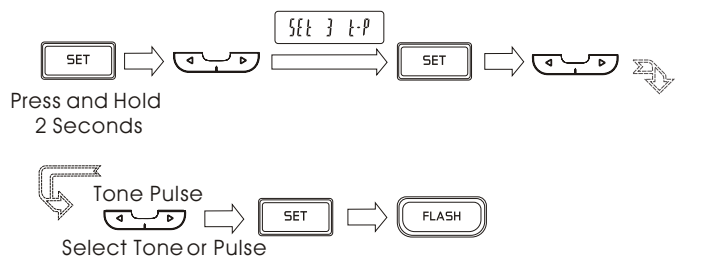


SETTING FLASH

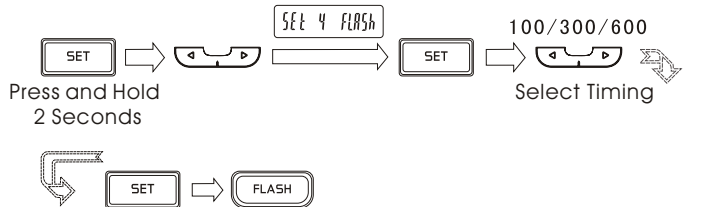


PHONE OPERATION

RECEIVING A PHONE CALL

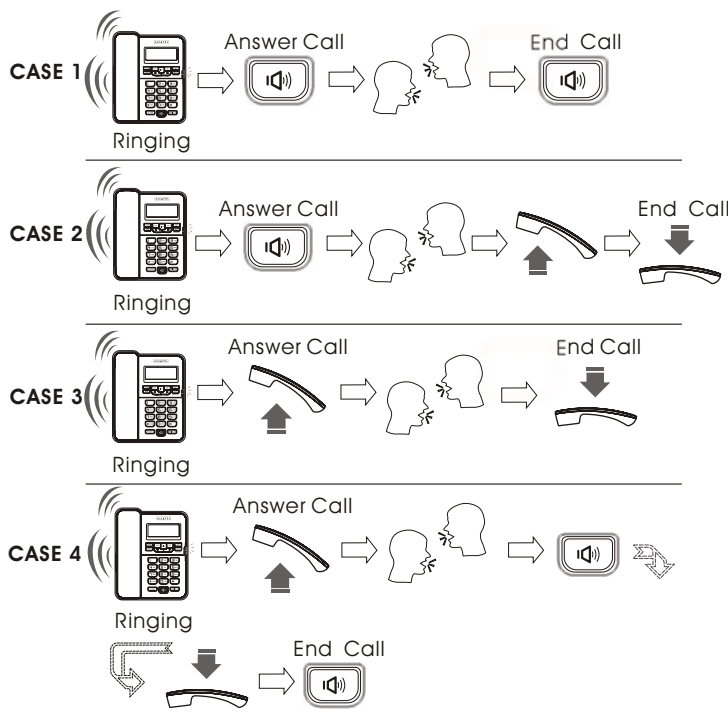

MAKING A PHONE CALL

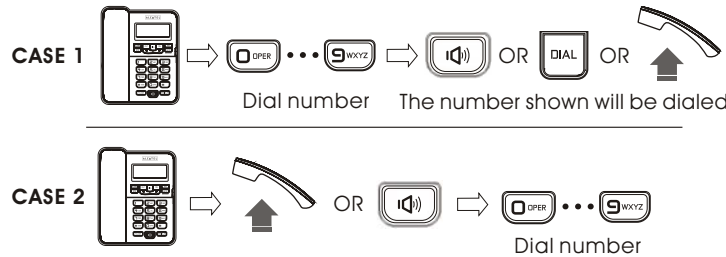


CONTRAST LEVEL ADJUSTMENT

In on-hook state, press the **MUTE** button to adjust the display contrast level.

P = > T DIAL MODE

In PULSE dialing mode, press [*] button to access TONE service.

REDIAL

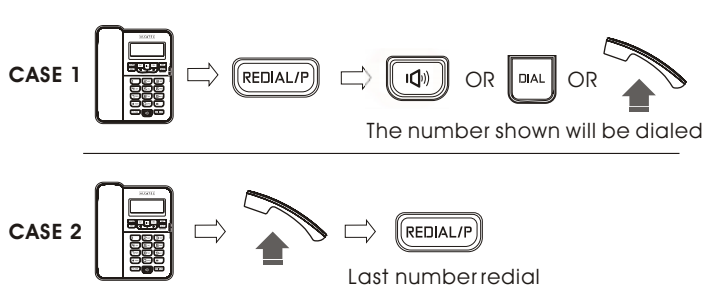

MUTE

In off-hook state, user can press the **MUTE** button to access mute function, when **MUTE** is on, the **MUTE** indicator will show on the screen. Press the **MUTE** button to exit mute function and resume normal conversation.


CALLER ID FEATURES

Caller ID (CID) is a service available from your local telephone company. For Caller ID to work on this system, you must subscribe to Caller ID service. This unit can receive caller ID without any setting. Your Caller ID information may include the phone number, date and time.

REVIEWING INCOMING CALLS




DIAL BACK A CALLER ID NUMBER

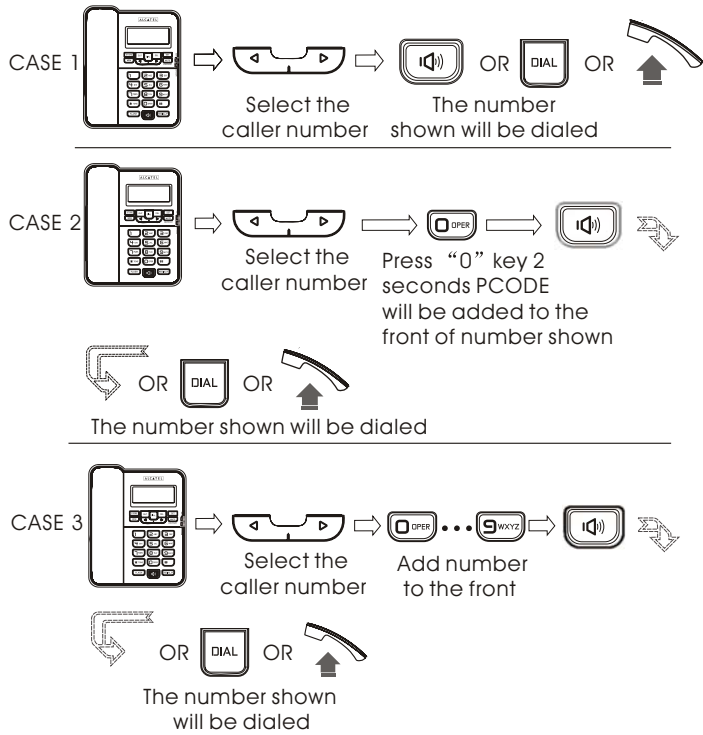


REVIEWING OUTGOING NUMBERS



DIAL BACK AN OUTGOING NUMBER

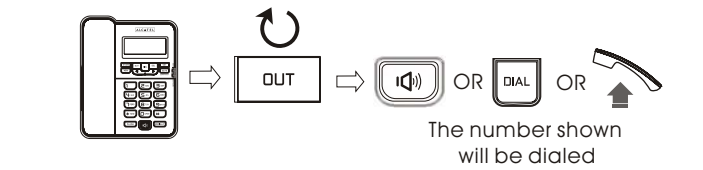

DELETING A CALLER ID NUMBER

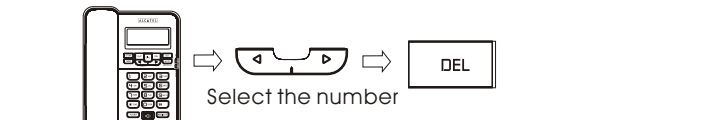

MEMORY OPERATIONS

STORING A TELEPHONE NUMBER




STORING INCOMING CALL NUMBER



STORING OUTGOING NUMBERS INTO MEMORY



DIALING A MEMORY LOCATION



DELETING A MEMORY LOCATION



TROUBLESHOOTING TIPS

No Dial Tone

- Check all cabling to make sure that all connections are secure and not damaged.
- Check hook switch: Does it fully extend when handset is lifted from cradle?

No Display

- Replace the batteries.
- Check for proper battery installation.

No Information is Shown After the Phone Rings

- Are you subscribed to Caller ID service from your local telephone company?
- Be sure to wait until the second ring before answering.

Phone Dials in Pulse with Tone Service

- Make sure T/P DIAL MODE is set to TONE DIAL.

Phone Won't Dial Out with Pulse Service

- Make sure T/P DIAL MODE is set to PULSE DIAL.

Phone Does Not Ring

- You may have too many extension phones on your line. Try unplugging some extension phones.
- Check for dial tone. See troubleshooting tips for no dial tone.

Incoming and Outgoing Voice Volume Low

- Are other phones off hook at same time? If so, this is normal condition as volume drops when additional phones are used at once.
- Check the handset receiver or speaker volume.

GENERAL PRODUCT CARE

To keep your phone working and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, Motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment to the unit.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

Used equipment must be disposed of in compliance with current environment protection regulations. You should return it to your reseller or dispose of it in an approved recycling centre.

INTRODUCTION

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services.

Your Caller ID phone enables you to:

- Identify callers before you answer the phone.
- View the time and date of each incoming call.
- Record up to 68 Caller ID messages sequentially.

MAIN FEATURES

- FSK/DTMF Caller ID auto detect
- Incoming call log records up to 68 calls
- Outgoing call log records up to 15 last dialed numbers
- 10 two-touch memories
- On hook pre-dialing
- Prefix Code
- Redial
- Pulse or Tone dialing mode
- Mute function
- Speakerphone

To get the most from your new phone, you are suggested to take a few minutes right now to read through this user guide.

SHORT GLOSSARY OF TERMINOLOGY USED IN THIS MANUAL

Hook switch. The part of the phone that pops up to activate the phone line when the handset is lifted from the base.

Off-hook. A term used to describe the phone in its active mode when the handset is off of the base cradle or when the **SPEAKER** button is pressed.

On-hook. A term used to describe the phone in an inactive mode.

PARTS CHECKLIST

Make sure your package includes the items:


MANUAL DE USUARIO

TEMPORIS 55-EX

ALCATEL

LISTA DE PARTES

Asegúrese de que su embalaje contiene los siguientes artículos:

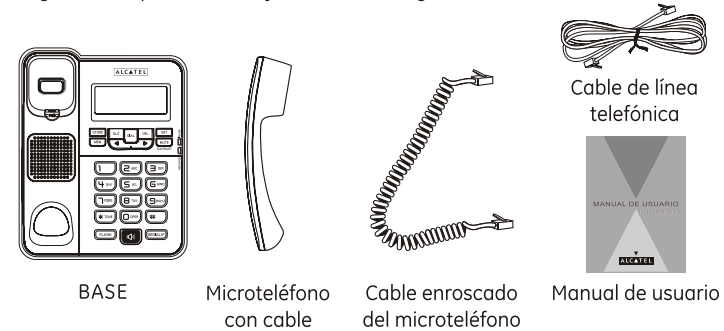

NOTE: If you find any of the parts missing, please contact your local shop where you buy this product right away.

REQUISITOS DE TOMA TELEFÓNICO

Para utilizar este teléfono, necesitará un toma de teléfonos modular tipo RJ11C, que es similar al que se muestra en la imagen. Si no posee un toma modular, comuníquese con su compañía de teléfonos local para averiguar cómo instalar uno.

Placa para pared

Toma de teléfonos modular

INSTALACIÓN

PRECAUCIÓN: Desconecte el cable de teléfono de la salida de la pared antes de instalar o reemplazar las pilas.

- NO instale el teléfono durante una tormenta eléctrica.
- NO toque los cables no aislados del teléfono ni los terminales a menos que se haya desconectado la línea de teléfono en la interfaz de red.
- Tenga precaución al instalar o modificar las líneas telefónicas.
- NO instale los tomas de teléfono en lugares húmedos a menos que el toma esté diseñado específicamente para lugares húmedos.
- Desconecte de manera temporal cualquier equipo conectado con este teléfono tales como un fax, otros teléfonos o un módem.

INSTALAR Y REEMPLAZAR LAS PILAS

Su teléfono con Identificador de Llamadas utiliza 3 pilas alcalinas AA para recibir y almacenar los registros del Identificador de Llamadas y para almacenar los números que utiliza frecuentemente.

IMPORTANTE: Si no utilizará el teléfono por más de 30 días, retire las pilas ya que podrían tener pérdidas y provocar daños en la unidad.

PILAS

1. Si el cable de línea telefónica está conectado, desconéctelo de la unidad base.
2. Voltee el teléfono, utilice un bolígrafo o un clip para abrir la tapa del compartimiento de las pilas. Retire la tapa pulsando del compartimiento pulsándola hacia abajo y deslizándola hacia fuera de la unidad.
3. Inserte 3 pilas alcalinas AA en el compartimiento según se muestra en el diagrama.
4. Vuelva a colar la tapa del compartimiento de las pilas hasta que trabé.
5. Si había desconectado previamente el cable de línea, vuelva a conectarlo a la unidad y verifique las ubicaciones de la memoria..


INSTALAR EL TELÉFONO

Puede colocar su teléfono sobre una superficie nivelada, tal como un escritorio o mesada o puede colocarlo en la pared.

1. Conecte el microteléfono.
2. Conecte la línea telefónica.


NSTALAR EL TELÉFONO EN LA PARED

1. Rote la traba para la instalación en pared según se muestra en la ilustración.


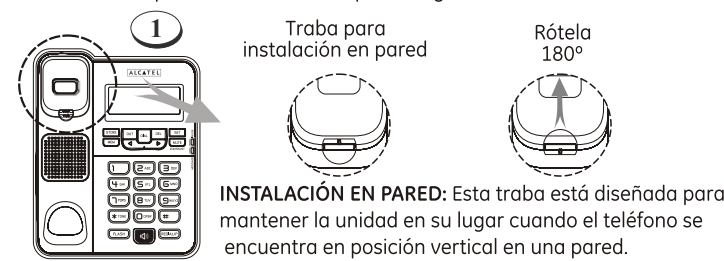


INSTALACIÓN EN PARED: Esta traba está diseñada para mantener la unidad en su lugar cuando el teléfono se encuentra en posición vertical en una pared.

2. Coloque la unidad base en la pared y luego enchufe un extremo del cable de línea en la caja de conexión y el otro extremo en el toma modular de línea telefónica que tiene el símbolo "T".
3. Ajuste el teléfono a la pared según se muestra en la siguiente imagen.

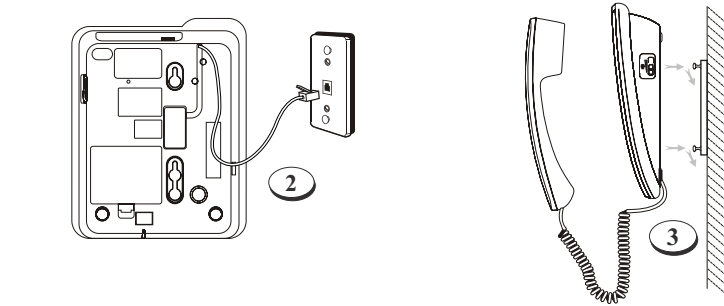

MENÚ DE OPCIONES

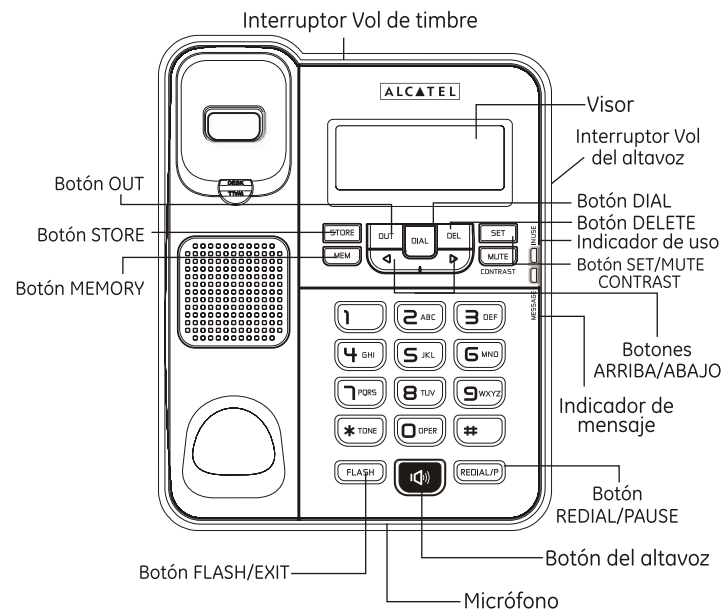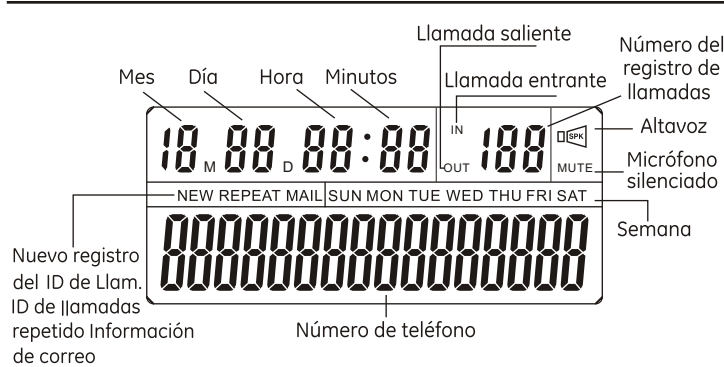

CONFIGURAR EL TELÉFONO

NOTA: Modifique inmediatamente las configuraciones predeterminadas de fábrica según sea necesario.

Hay cuatro opciones para configurar.


SEL 1 ABFF Configurar fecha y hora

SEL 2 PCODE Pcode es un Código de prefijo que el usuario puede agregar delante del número antes de marcarlo.


SEL 3 L-P Seleccione el modo de marcado. Esto dependerá de la empresa de teléfono con la que esté conectado.

SEL 4 FLASH Configuración del tiempo de FLASH (conmutación de línea). Este tiempo le permite al usuario acceder en forma momentánea a los servicios telefónicos tales como llamada en espera, pulsando el botón FLASH.


CONFIGURAR FECHA Y HORA

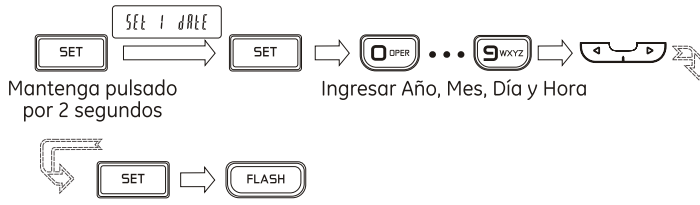


CONFIGURAR EL CÓDIGO DE PREFIJO

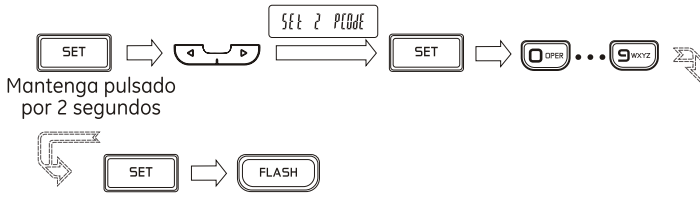

CONFIGURAR TONO/PULSO

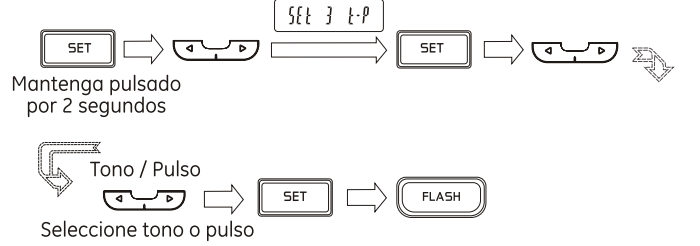


CONFIGURAR FLASH

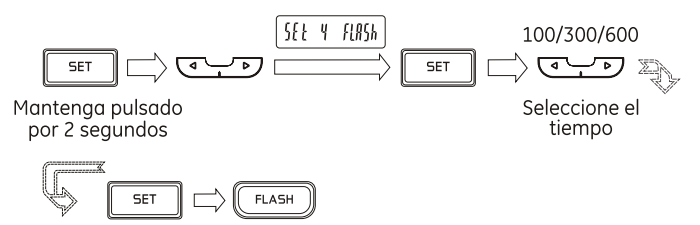


OPERACIÓN DEL TELÉFONO

RECIBIR UNA LLAMADA TELEFÓNICA

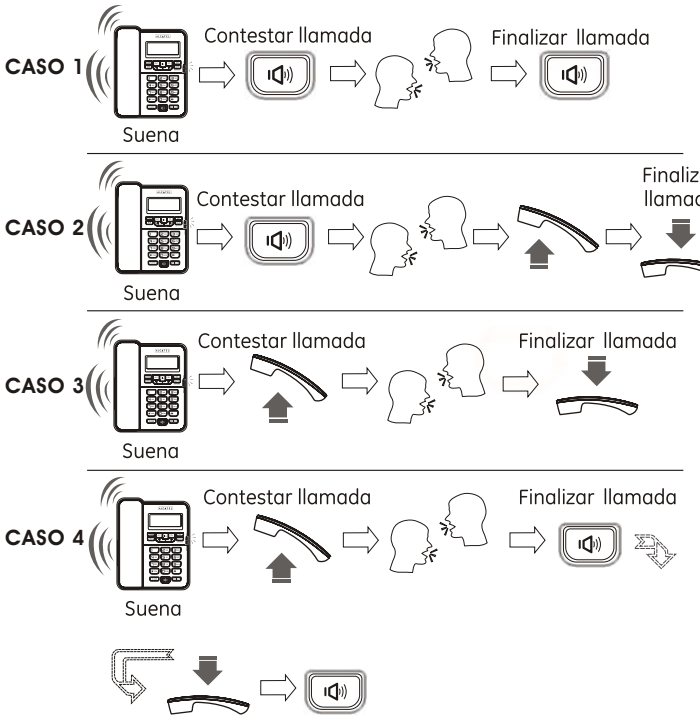

REALIZAR UNA LLAMADA TELEFÓNICA

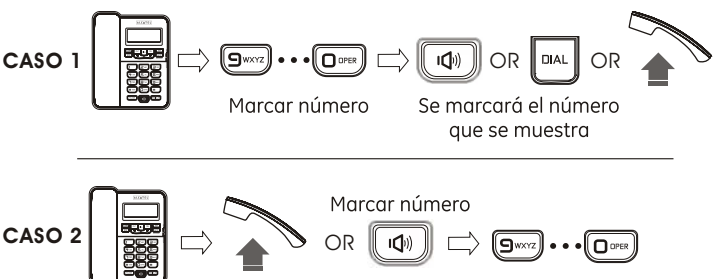


AJUSTAR EL NIVEL DE CONTRASTE

Con el teléfono colgado, pulse el botón MUTE para ajustar el nivel de contraste de visor LCD.

MODO DE MARCADO P=>T

En el modo de marcado por PULSOS; pulse el botón [*] para acceder al servicio por TONOS.

RELLAMADA

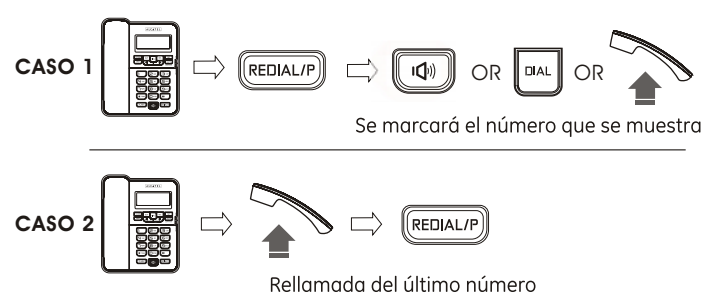

SILENCIO

Con el teléfono descolgado, el usuario puede pulsar el botón MUTE para acceder a la función de silencio, cuando el silencio está activado, el indicador de silencio se mostrará en el visor. Pulse el botón MUTE para salir de la función de silencio y regresar al modo inactivo.


CARACTERÍSTICAS DEL IDENTIFICADOR DE LLAMADAS

El Identificador de Llamadas (CID) es un servicio disponible de su empresa de teléfonos local. Para que el Identificador de Llamadas funcione en su teléfono, deberá suscribirse al servicio de Identificación de Llamadas. Esta unidad puede recibir información del Identificador de Llamadas FSK y DTMF sin ninguna configuración. Su información del Identificador de Llamadas puede incluir el número de teléfono, la fecha y la hora.

REVISAR LLAMADAS ENTRANTES




LLAMAR A UN NÚMERO DEL REGISTRO DEL IDENTIFICADOR DE LLAMADAS

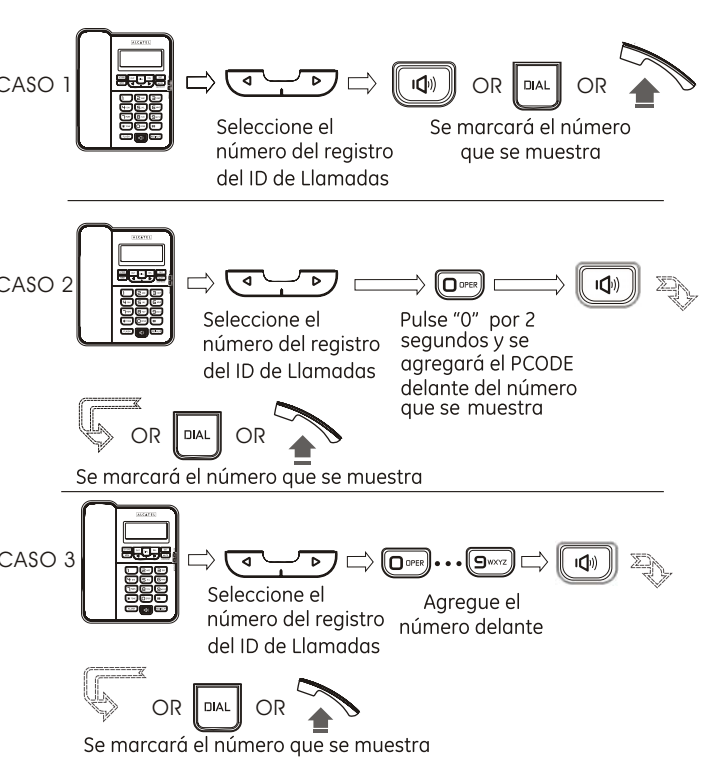


REVISAR LOS NÚMEROS DE LAS LLAMADAS SALIENTES



LLAMAR A UN NÚMERO DEL REGISTRO DE LLAMADAS SALIENTES

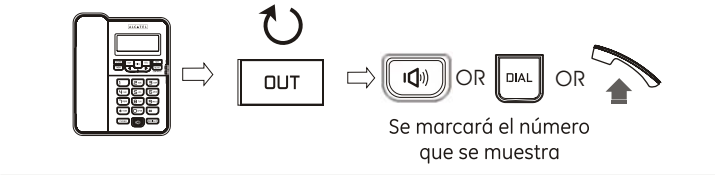


BORRAR UN NÚMERO DEL IDENTIFICADOR DE LLAMADAS

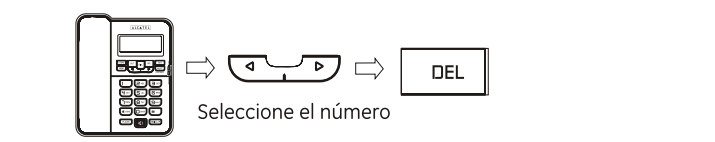

OPERACIÓN DE LA MEMORIA


GUARDAR UN NÚMERO DE TELÉFONO




GUARDAR UN NÚMERO DE LLAMADA ENTRANTE



GUARADR NÚMERO DE LLAMADAS SALIENTES EN LA MEMORIA

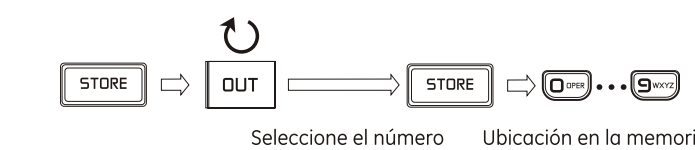

MARCAR DESDE UNA UBICACIÓN EN LA MEMORIA



BORRAR UNA UBICACIÓN EN LA MEMORIA



SOLUCIÓN DE PROBLEMAS

NO HAY TONO DE MARCADO

- Verifique el cableado para asegurarse de que todas las conexiones son correctas y no están dañadas.
- Verifique el interruptor para colgar. ¿Se extiende por completo cuando se toma el microteléfono?

NO SE MUESTRA NADA EN EL VISOR

- Reemplace las pilas.
- Asegúrese de que las pilas están correctamente instaladas.

NO SE MUESTRA NINGUNA INFORMACIÓN DESPUÉS DE QUE SUENA EL TELÉFONO

- ¿Se encuentra suscrito al servicio de Identificación de Llamadas de su empresa de teléfonos local?
- Asegúrese de esperar hasta que suene por segunda vez antes de contestar la llamada.

EL TELÉFONO MARCA POR PULSOS CON SERVICIO POR TONOS

- Asegúrese de que el modo de marcado esté configurado en marcado por tonos (TONE).

EL TELÉFONO MARCA POR TONOS CON SERVICIO POR PULSOS

- Asegúrese de que el modo de marcado esté configurado en marcado por pulsos (PULSE).

EL TELÉFONO NO SUENA

- Es posible que tenga demasiadas extensiones en su línea. Desenchufe algunas de las extensiones.
- Verifique el tono de marcado. Si no hay tono de marcado, consulte las soluciones para "No hay tono de marcado".

BAJO VOLUMEN DE VOZ ENTRANTE Y SALIENTE

- Verifique el volumen del receptor o altavoz.
- ¿Hay otros teléfonos descolgados al mismo tiempo? Entonces, esto es normal, ya que el volumen disminuye cuando se utilizan varios teléfonos al mismo tiempo.

CUIDADO GENERAL DEL PRODUCTO

Para que su teléfono funcione y se vea bien por más tiempo, siga estas indicaciones:

- Evite colocar la unidad cerca de dispositivos y electrodomésticos que generen ruido eléctrico (por ejemplo, motores o lámparas fluorescentes).
- NO exponga la unidad directamente a la luz solar o a la humedad.
- Evite arrojar la unidad u otro tratamiento brusco.
- Limpie con un paño suave.
- No utilice agentes de limpieza fuertes o polvos abrasivos ya que podría dañar el acabado.
- Guarde el embalaje original en caso de que necesite transportar la unidad más adelante.

El equipo usado deberá eliminarse de acuerdo con las reglamentaciones de protección ambiental actuales. Deberá regresar la unidad al revendedor o desecharlo en un centro de reciclado aprobado.